

1. DISPLAY:

BIG WINDOW

Display big function value when scanning the TIME / CNT / TEMPO CALORIES / PD

TIME. DISPLAY _

TOTAL / COUNT

UP KEY.


Increase setting value

PROGRAM Key

PROGRAM select

DOWN Key

Reduce setting value.

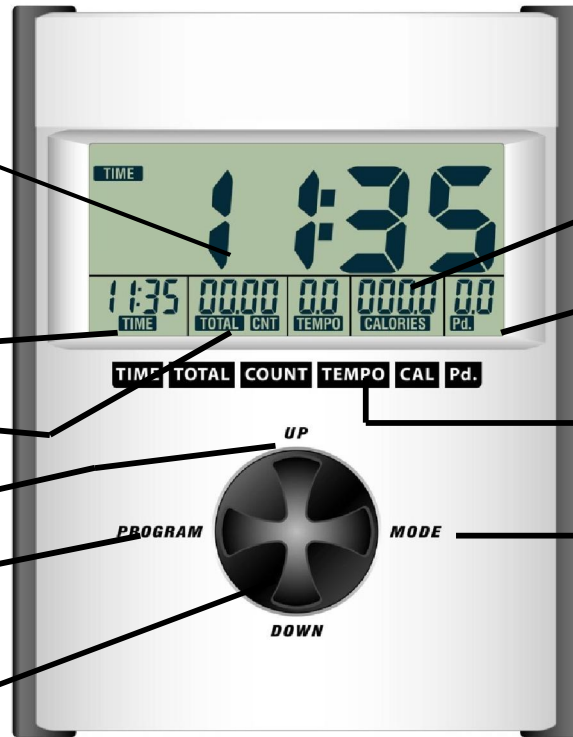

CALORIES

Pd.: POUND _

TEMPO

MODE Key

Selection function value and confirm.

Display show "0" for NO RE-BOUND BOARD and "1" for RE-BOUND BOARD.

(1) After powering on, display show "0" for NO RE-BOUND BOARD.

(2) Hold program key over 2 seconds for all reset, LCD will display show "1" for RE-BOUND BOARD.

2. MODEL FUNCTION DESCRIPTION

TIME	: 0:00~99:59.
COUNT	: 0~9999
TOTAL COUNT	: 0~9999. TOTAL COUNT cannot be purged unless main power shut off or all reset. It will reset when counter accumulate up to 9999.
TEMPO	: MANUAL: 0.0~10 / PROGRAM: 1~4
CALORIES	: 0~9999.
POUND	: 0.0~10 LBS

3. OPERATION

1. Power on, LCD display all in 2 seconds and beep 1 second, then jump into setting mode without SCAN function. Press PROGRAM button under MANUAL mode for program choice of P1-P6.


MANUAL P1 P2 P3 P4 P5 P6



- a. When choose MANUAL mode, system into value setting, TIME and digits blink once per second, same value shows on LCD. It can be set by UP/DOWN button. Press MODE button to switch to next function. Scope setting of TEMPO from 0.0 to 10 repeatedly.
- b. After choice P1, P2, P3, P4, P5 and P6, system will switch to set mode, TIME and digit blink once per second. A same value shows on large LCD, value can be set by UP/DOWN button. Press MODE button to switch to next function.
- c. Scope setting of TEMPO among 1, 2, 3 and 4 switched repeatedly.
- d. When jump into SET mode, large LCD will display as small LCD (exception TEMPO setting in PROGRAM mode).
- e. Under MANUAL mode, a beep tone will follow TEMPO setting. Under PROGRAM mode, a beep tone will follow TEMPO which arranged.

2. System starts execution when signal input, Signal stop input 6 seconds, STOP displayed and stop counting each of value.
3. During system execution, the value will count down if the value has been set, the value will count up if the value hasn't been set.
4. Auto off: Off automatically in 5 minutes if no any keys be pressed or any pulse input from sensor.
5. Value counting of CAL : (The value of CAL will calculate according to value setting of Pd.)
6. To disable BUZZER function, press MODE with UP button for 1 second.

4. PROGRAM PROFILE

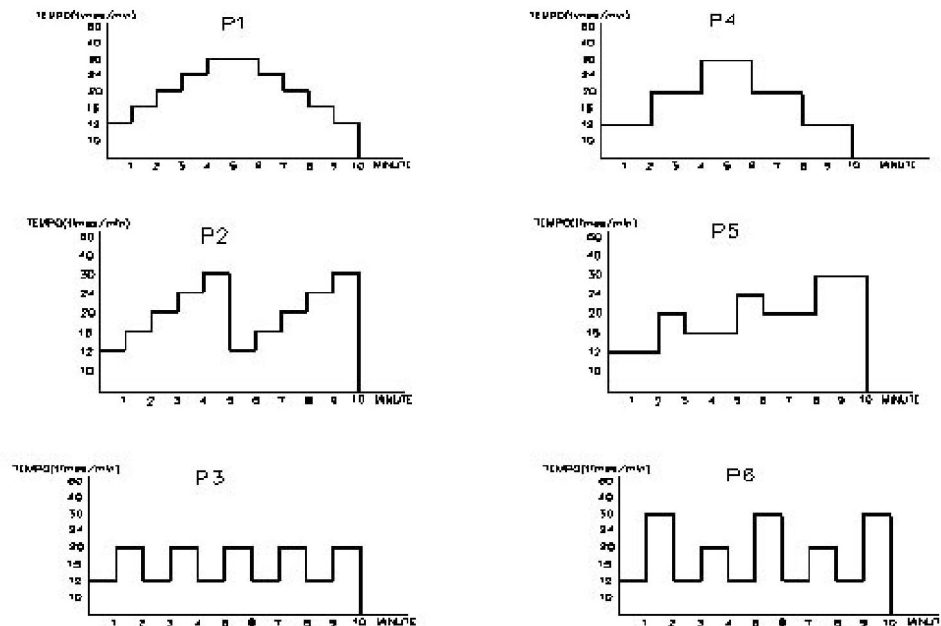

5. KEY FUNCTION

MODE	: Selection function value and confirm
UP	: Increase setting value.
DOWN	: Decrease setting value.
PROGRAM	: MANUAL- P1~P6.

6. TIPS

1. 2 x AA batteries are used for this computer. SUM3 SIZE AA (1.5V)
2. Keep moisture away from computer.